Remove the Molds on the Deck and Hullside
Before Applying Wooden Deck Parts

Make Holes with 0.5mm Drill (Both Side)

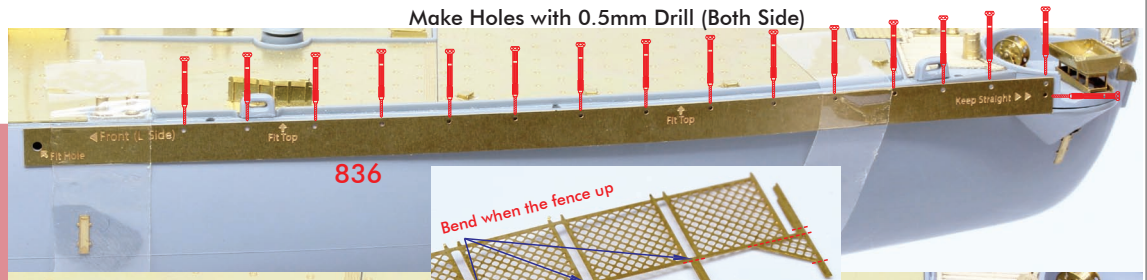

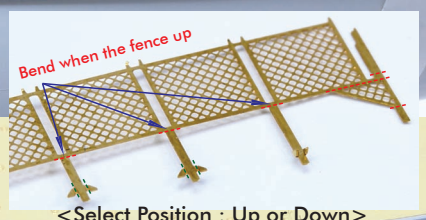

<Select Position : Up or Down>

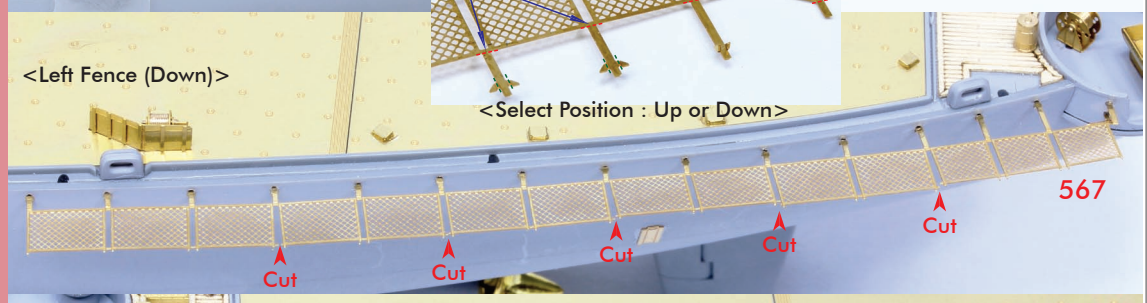
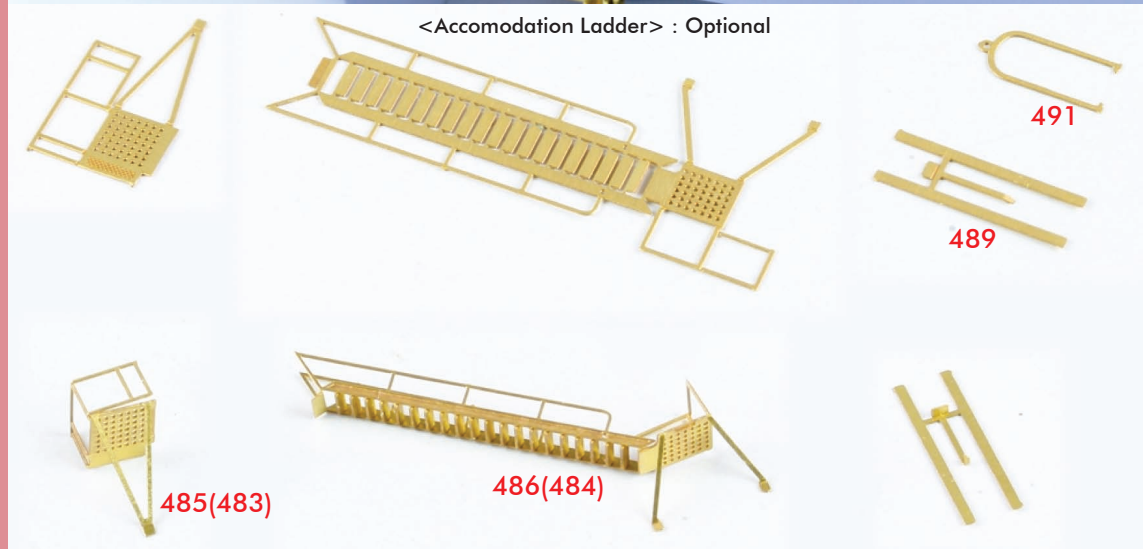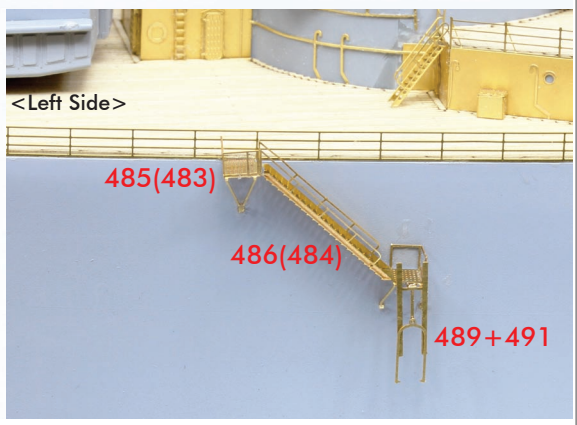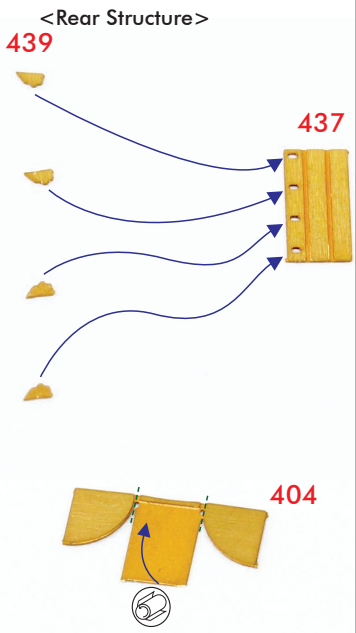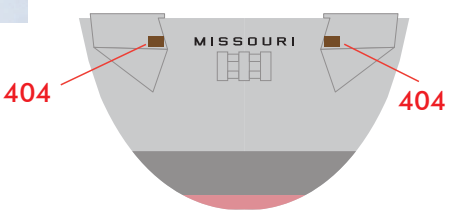
<Accomodation Ladder> : Optional